

## Release 1.2.4

**Release Date:** 2020-07-24

**SVN Revision:** 1100

Changes since last Build:

- FIX: In modeOfOperation 6, homing starts with controlWord 0x10 and this is always on from TwinCAT:  
Do not manually set startHoming
- CHG: Setting the referencePosition in the TwinCAT-EtherCAT startup list does not seem to work  
(problem with LREAL?): Set it here by direct register access. (fixed in 1.2.4)

## Release 1.2.1

**Release Date:** 2020-05-06

**SVN Revision:** 1092

Changes since last Build:

- NEW: Use manual configuration settings by code from Daniel Fringeli, Beckhoff merged, into TE\_AxisNci.TcPOU
- FIX: Homing start with EtherCAT command word is done by NCI module: Must not start by register access

## Release 1.2.0

**Release Date:** 2019-12-13

**SVN Revision:** 1077

Changes since last Build:

- NEW: TwinCat Event messages 19-26
- NEW: Support CSV and PV modes of operation
- CHG: Sample codes based on ESI File Triamecl.7.xml to support cyclic extensions